



JOE WILDE COMPANY, INC.

HOMEOWNER PRE-INSTALLATION INSTRUCTIONS

REAR OF GARAGE

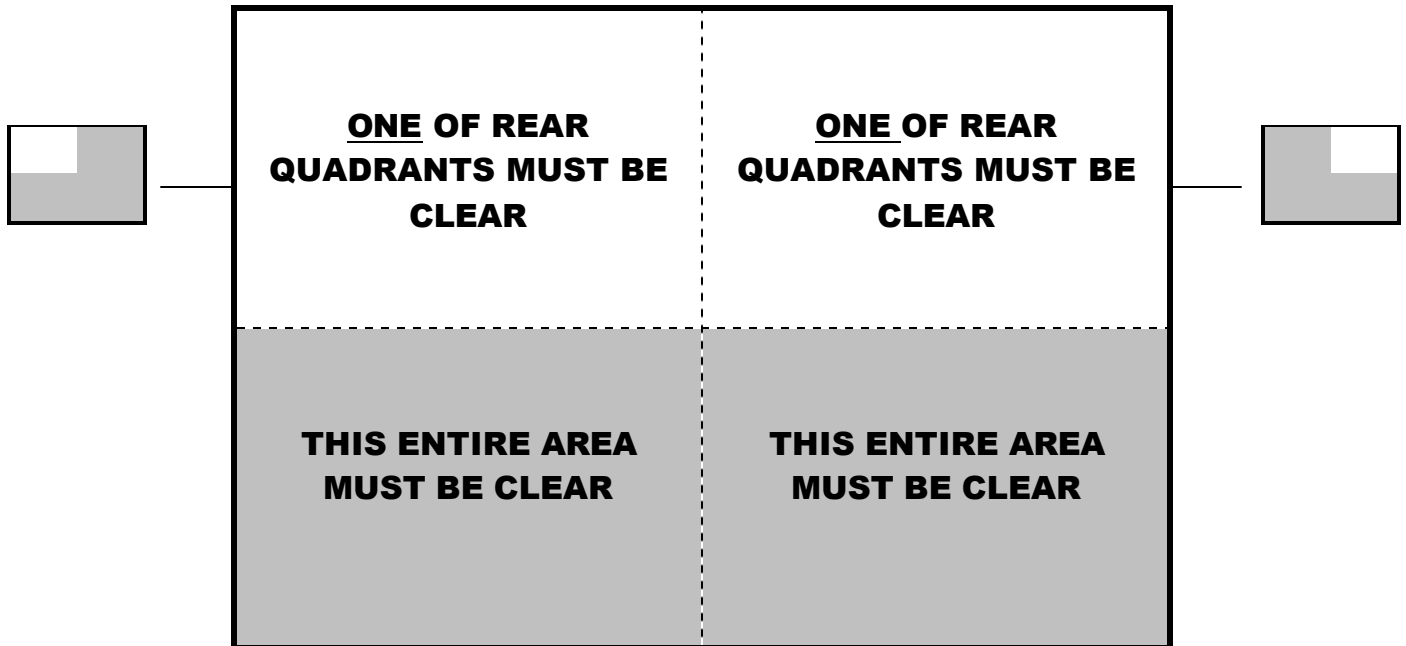

FRONT OF GARAGE

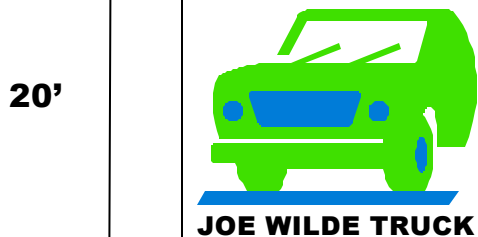

JOE WILDE TRUCK

OWNER'S CARS

DRIVEWAY

- Please be sure 3/4 of GARAGE is cleared PRIOR to installation, as shown above
- Leave 20' of space in front of garage for Installer's Truck and work area
- In winter, please have driveway cleared of SNOW and ICE to help keep our crew safe

PLEASE CALL 262-782-0500 WITH ANY QUESTIONS